



Source: Leece-Neville Heavy Duty Systems Division - Arcade, NY USA
 Date: July 7, 2017
 Bulletin No: TSB-1038
 Models: 4800-4900 Alternators
 Subject: Wiring Diagrams

4800/4900 Ignition Excite / Remote Sense Wiring Diagram

Wiring for voltage sense at alternator output terminal.

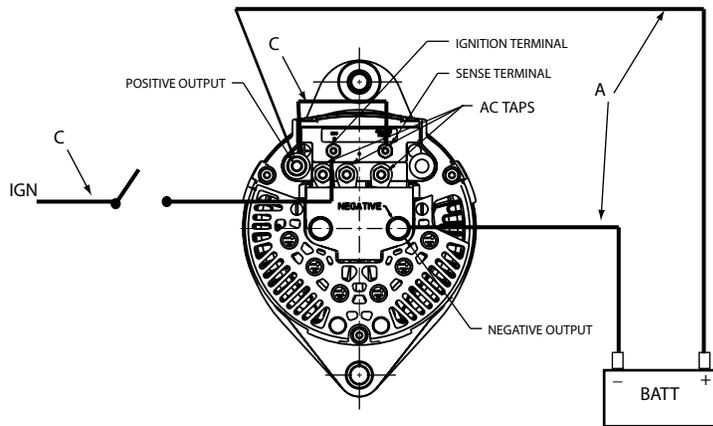

Wiring for battery isolator applications.


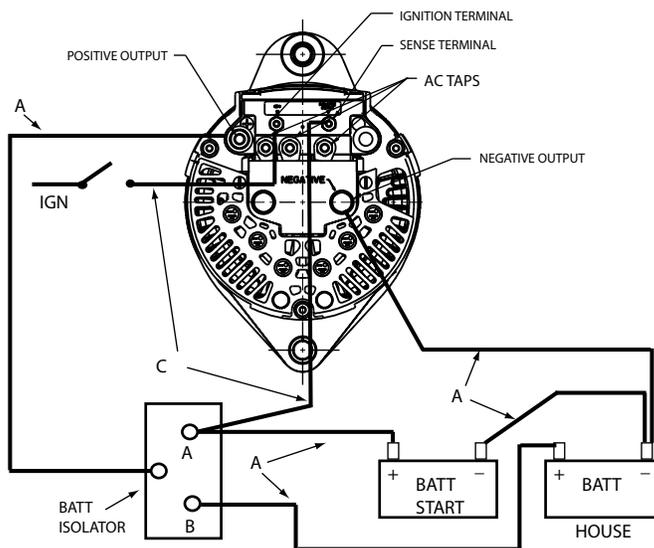


This technical Service Bulletin is intended to be used along with TSB-1001 Recommended Wire Size Document.


Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers'; and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at:

Date: July 7, 2017
Bulletin No: TSB-1038


4800/4900 Ignition Excite Wiring Diagram

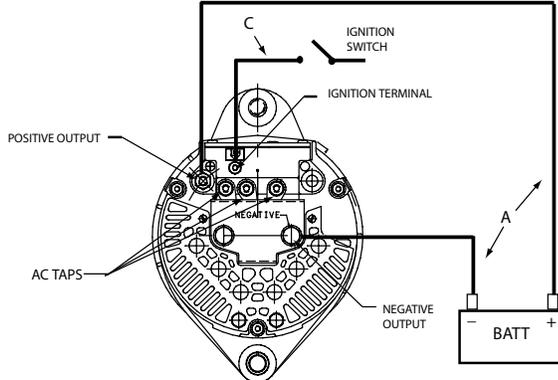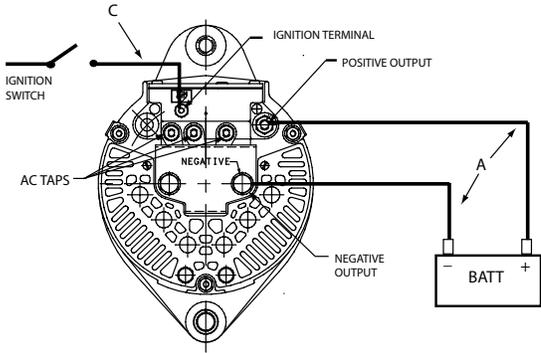

4800/4900 Self Excite Wiring Diagram

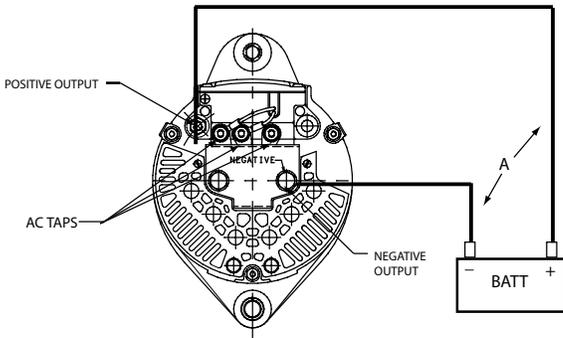

4800/4900 Remote Voltage Sense and Lamp Driver Wiring Diagram

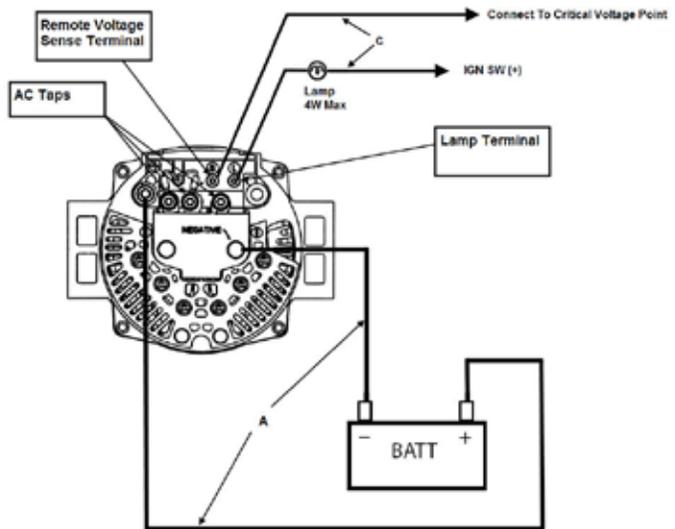

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at: