

**Source:** Prestolite Electric Leece Neville Heavy Duty Systems-Arcade, NY

**Bulletin No:** TWB-0054 **Date:** November 5, 2021

**Models:** A1743D\_A1744H

**Subject:** Wiring Diagram



techservice@prestolite.com

+1 (844) 492-4062

+44 20 8231 1000




## Wiring diagram for A1743D and A1744H alternator

The alternator is case ground (earth return).  
AC / W and FIELD2 connections are optional.

Lamp details: 3W max.

### Terminal tightening torque values

B+	7 – 9 Nm
B-, D+, S, IG, W, F	5 – 6 Nm

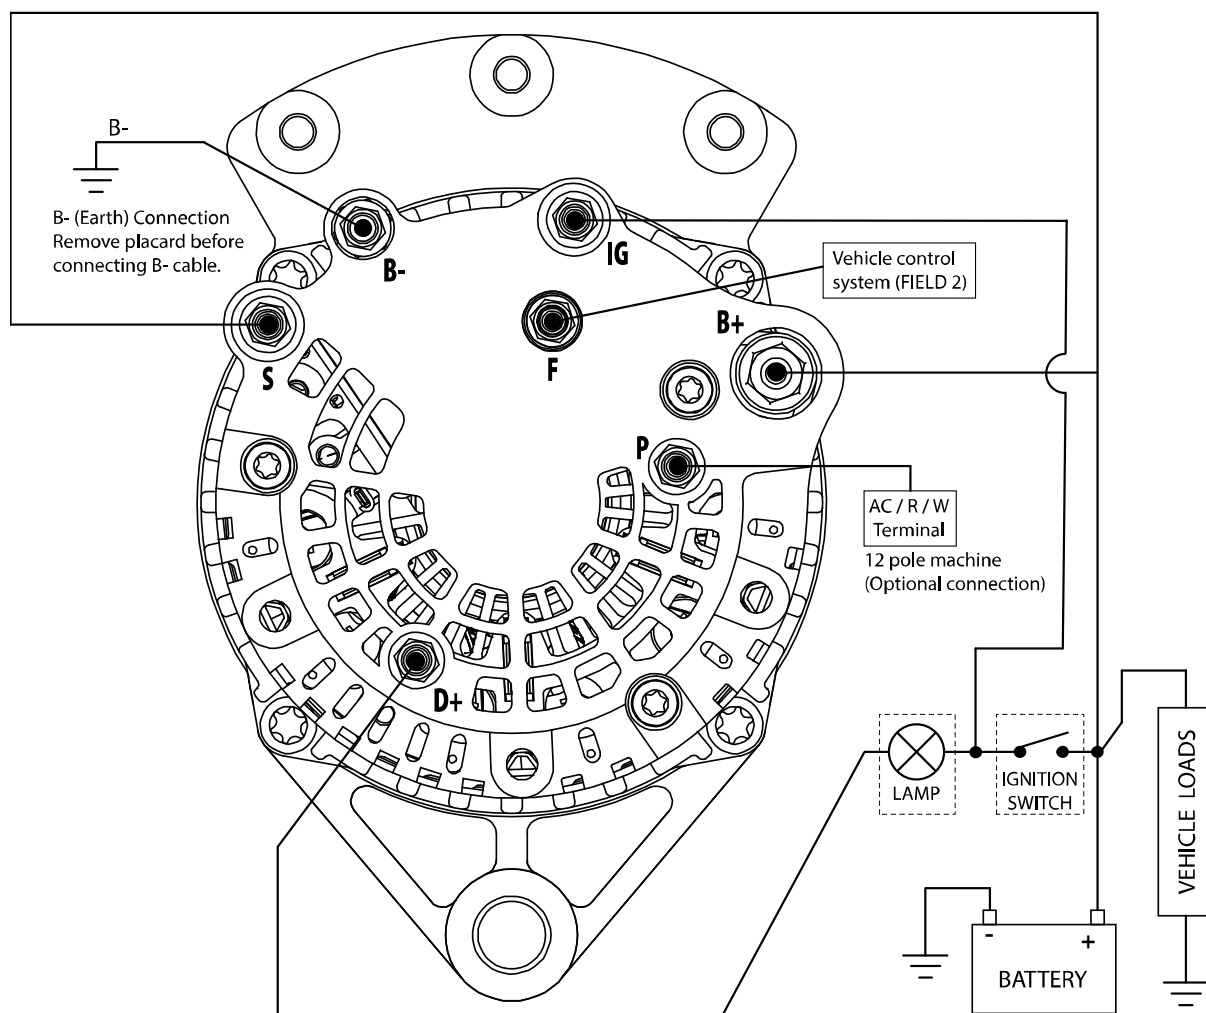

**Important:** The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at [www.prestolite.com](http://www.prestolite.com), or contact our technical service department at:

**North & South America:** Phone: +1 (844) 492-4062 | [techservice@prestolite.com](mailto:techservice@prestolite.com)

**Europe:** Phone: +44 20 8231 1000 | [techservice@prestolite.com](mailto:techservice@prestolite.com)

