

Source: Prestolite Electric Leece Neville Heavy Duty Systems-Arcade, NY

Bulletin No: TWB-0053 **Date:** November 1, 2021

Models: AVI143J 24V

Subject: Wiring Diagram



techservice@prestolite.com

+1 (844) 492-4062

+44 20 8231 1000




Wiring diagram for AVI143J 24V series alternators

The alternator is a self-exciting machine.

For basic operation only B+ connection is required. The alternator is case ground (earth return). All other connections are optional.

Lamp details: 2W max.

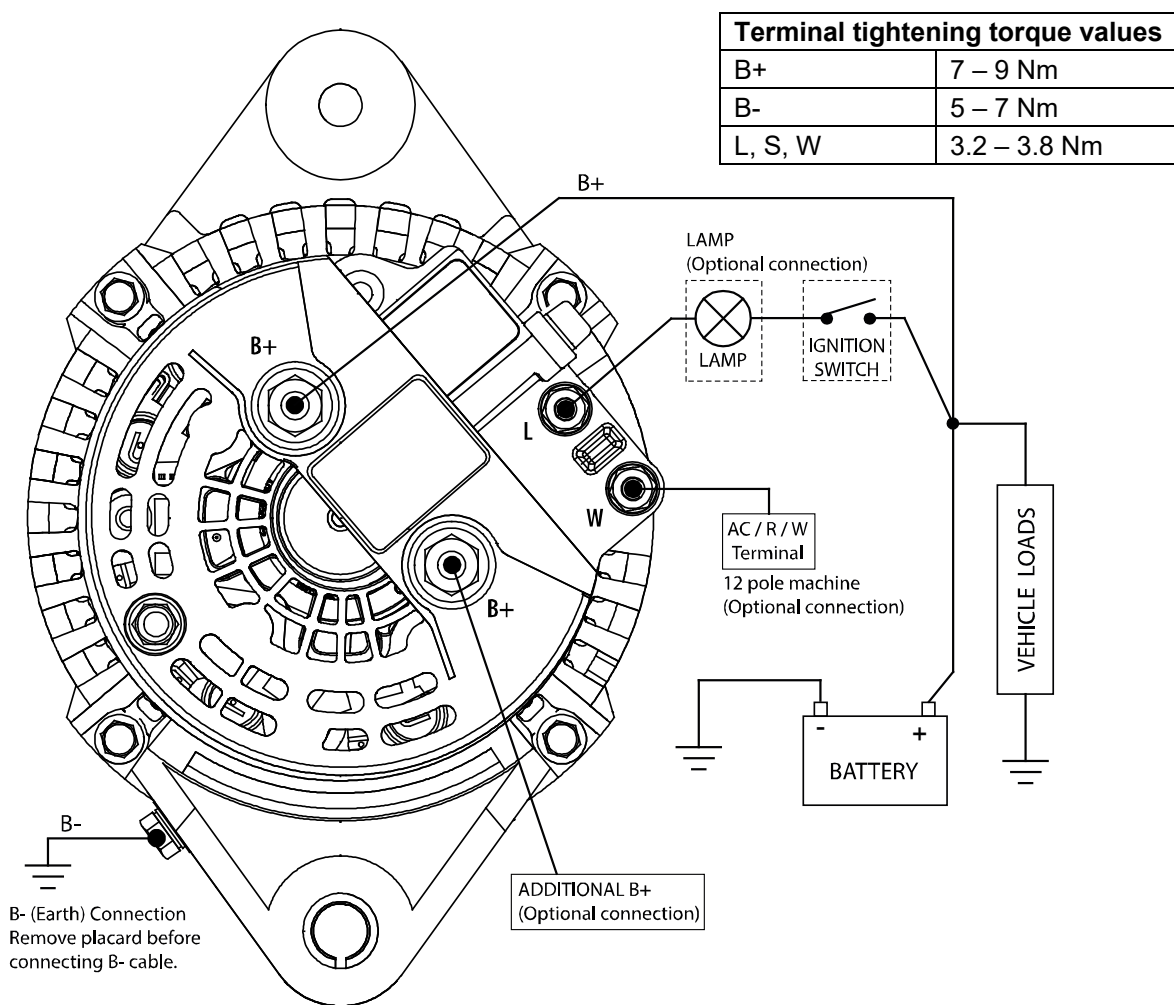

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at:

North & South America: Phone: +1 (844) 492-4062 | techservice@prestolite.com
Europe: Phone: +44 20 8231 1000 | techservice@prestolite.com

