


Source: Leece-Neville Heavy Duty Systems Division – Arcade, NY

Bulletin No: TSB-1182 **Date:** August 11, 2020

Models: BLD / BLP 4000 Series

Subject: Installation Instructions

 techservice@prestolite.com
 +1 (844) 492-4062
 +44 20 8231 1000

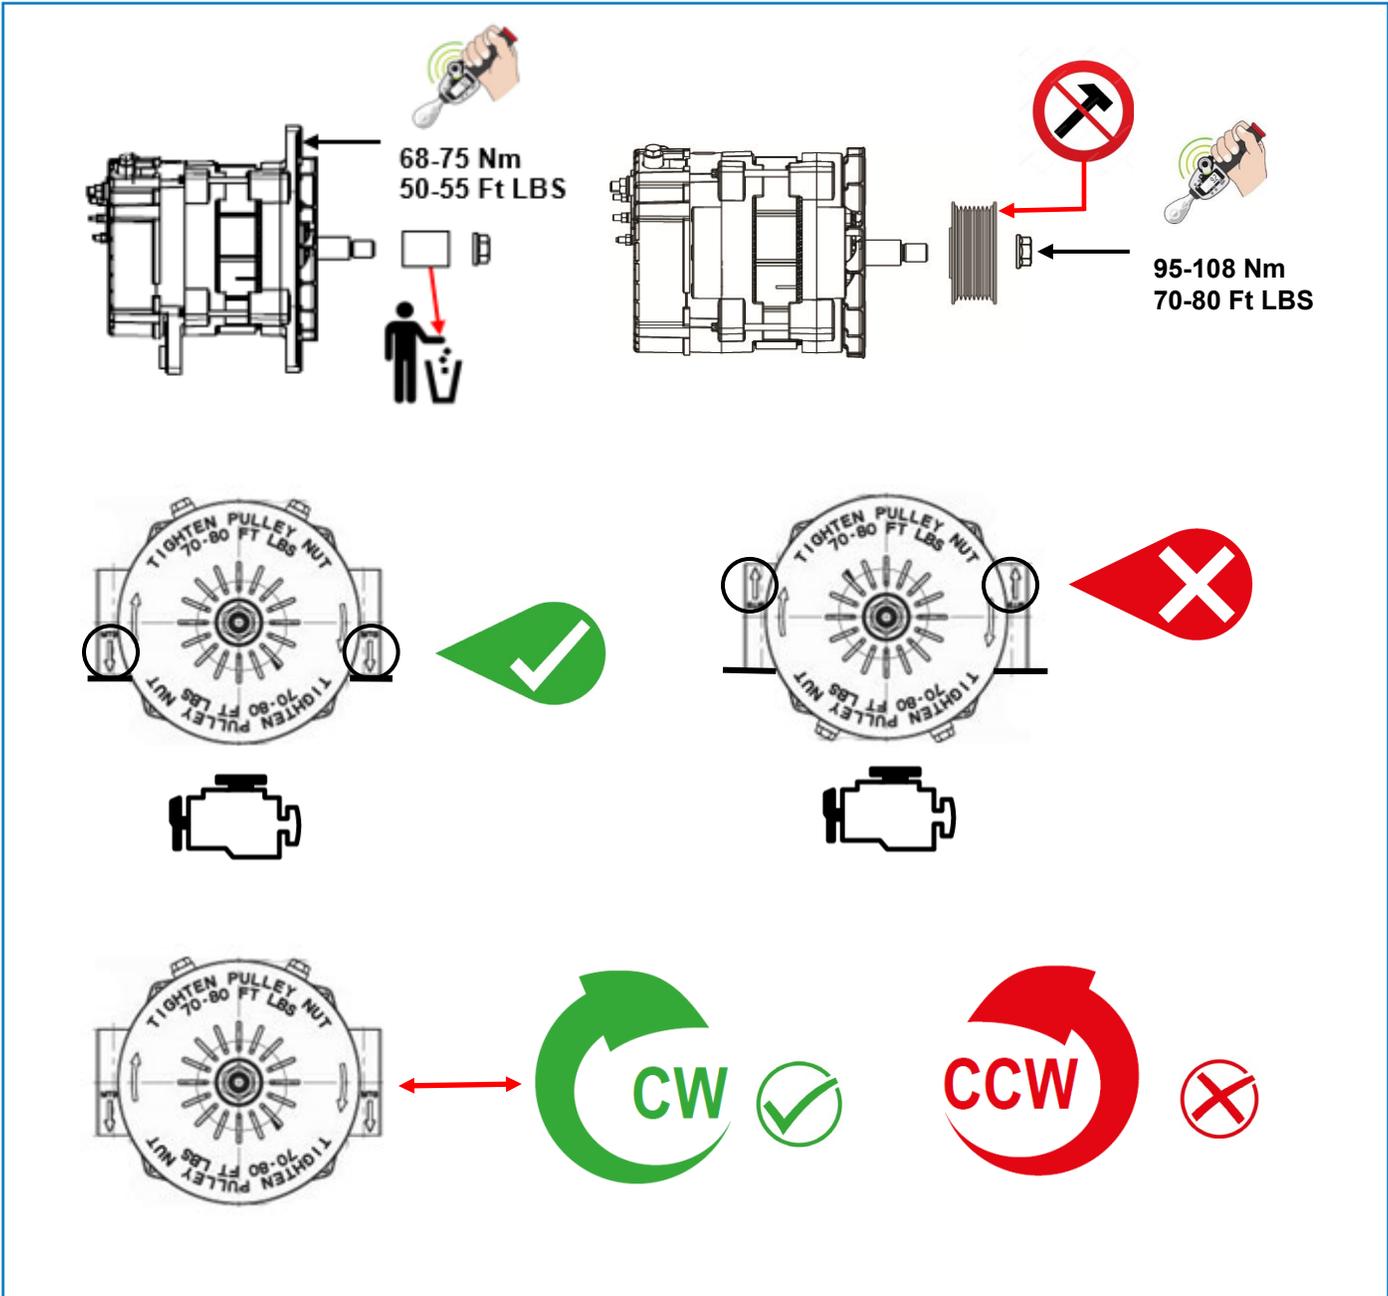

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at:




Bulletin No: TSB-1182

Date: August 11, 2020



techservice@prestolite.com
 +1 (844) 492-4062
 +44 20 8231 1000

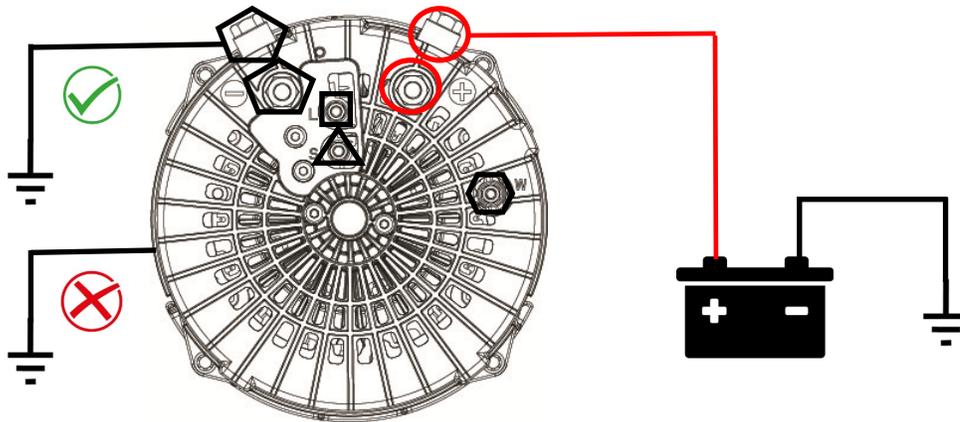

REQUIRED

Ground —  } 9-13.5 Nm
 Battery +  } 80-120 IN LBS



 → $\leq 3A$ 
 $> 3A$ 

OPTIONAL

Lamp (L) →  }
 (AC, R, W) →  } 2.0 - 2.5 Nm
 Sense (S) →  } 18 - 22 IN LBS



 → 80Hz = 600 RPM → 

 →  →  → 

$\leq 1A$  $> 1A$ 

 →  → 



Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at:

North & South America: Phone: +1 (844) 492-4062 | techservice@prestolite.com
 Europe: Phone: +44 20 8231 1000 | techservice@prestolite.com

