

Source:	Prestolite Electric Ltd - Greenford, London, UK
Date:	May 15, 2012
Bulletin No:	TSB4046
Models:	M105R Starter motors
Subject:	Starter motor wiring instructions

### M105R SERIES WIRING INSTRUCTIONS


The M105R series of starter motors have an auxiliary relay fitted. This is an integral part of the starter motor and when wiring to the vehicle this must NOT be by-passed. Warranty claims due to incorrect wiring will be rejected.

Please see instruction below on wiring the M105R series to the vehicle. If in doubt please consult an auto-electrician or contact Prestolite technical helpline on 020 8231 1137.

**B+ TERMINAL (T30)**  
Connect to main battery positive cable.

**SWITCH TERMINAL (T50C)**  
Connect to ignition switch.

**B- TERMINAL (T31)**  
Connect to main battery negative cable.  
Earth return / Grounded starters might not have a B- terminal.

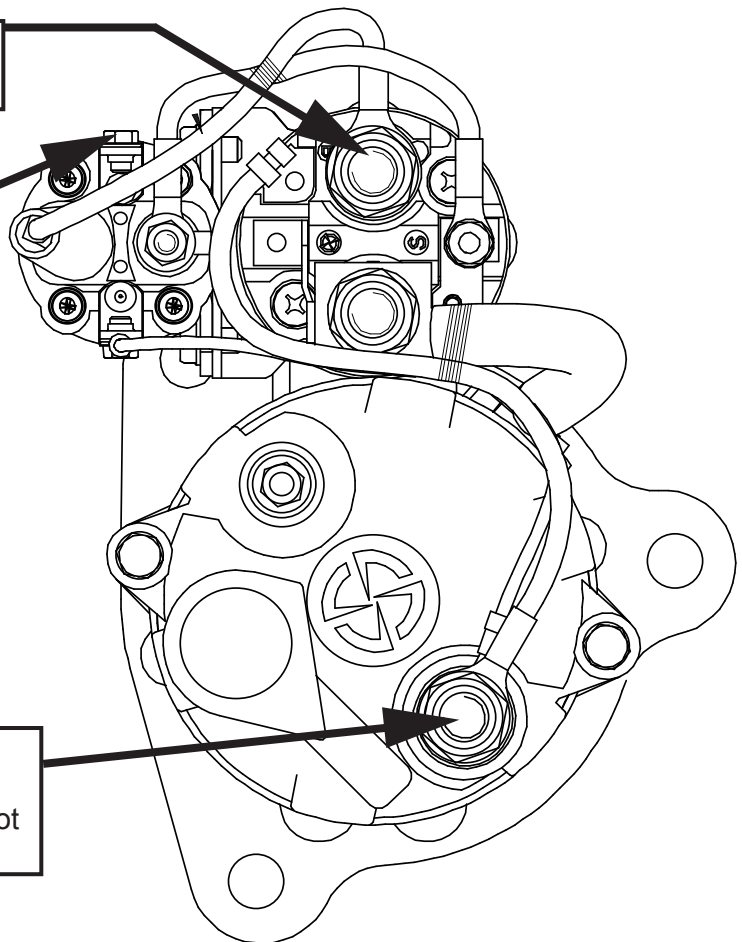

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at [www.prestolite.com](http://www.prestolite.com), or contact our technical service department at: